



Model Number: R8858





- ❑ 3D massage mechanism
- ❑ Negative oxygen ion
- ❑ Voice control function
- ❑ Tablet remote controller
- ❑ Super long SL track
- ❑ Airbag massage for whole body
- ❑ Heating function for back and sole of foot
- ❑ Triple massage rollers for foot
- ❑ The legrest can be extended by 16cm
- ❑ Zero gravity
- ❑ 5cm against the wall
- ❑ Bluetooth speaker

1. Turn on the power button on the remote controller to operate the massage chair
2. After press the power button, it will enter the auto mode programm. Choose the different auto mode from the remote controller.
3. To adjust the details as users' requirement (strength, air pressure, angles, time, bluetooth speaker etc)
4. Enjoy the massage

Auto mode and Description

Functions	Description	Intensity
01-Master	Master mode, full body massage,the intensity of roller and airbag massage are more strong.	Medium
02-Relaxing	Relaxing mode, full body massage, medium intensity for roller and airbag massage.	Medium
03-Sport Care	Full body massage, specially designed for athletes and fitness person.	Medium
04-Soft	Suitable for the elderly and children, full body massage, rollor and airbag massage in the lightest way to improve back pain and leg cramp for the elderly.	Low
05-Stretch	Full body massage that stretches the legs, back, and arms.	High
06-Sleep	Full body massage, push rod up/down, slow swing function, light intensity for rollers.	Low
07-SPA	The rollor is not working, the full body airbag massage and the foot roller are as relaxing as the SPA.	Medium
08-Refreshing	Full body massage, wake up the body, stronger intensity for rollor and airbag massage.	Medium
09-Spine Care	Full body massage, medium intensity for airbags, focus on shoulder and neck massage, improve long-term sedentary neck and shoulder pain for office workers.	Medium
10-Waist&Back	Partial massage, focus on the back and back massage to improve back pain, the rollor is focusing more on the waist back massage.	Medium
11-Neck&Shoulder	Partial massage, focus on improving neck pain and shoulder muscle strain, the rollor is focusing more on the neck and shoulder massage.	High
12-Slim	Full body massage, helpful for slimming waist and hip.	Low


Outer Structure

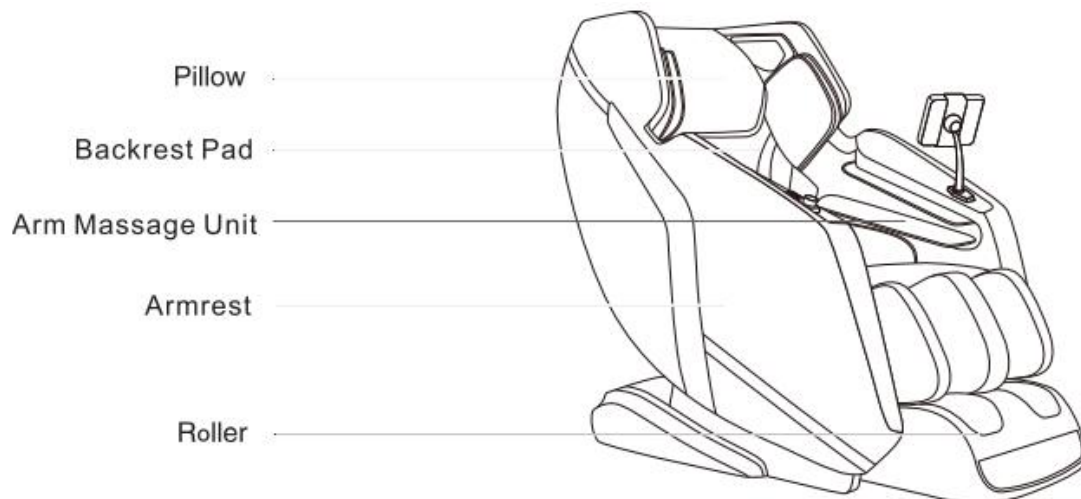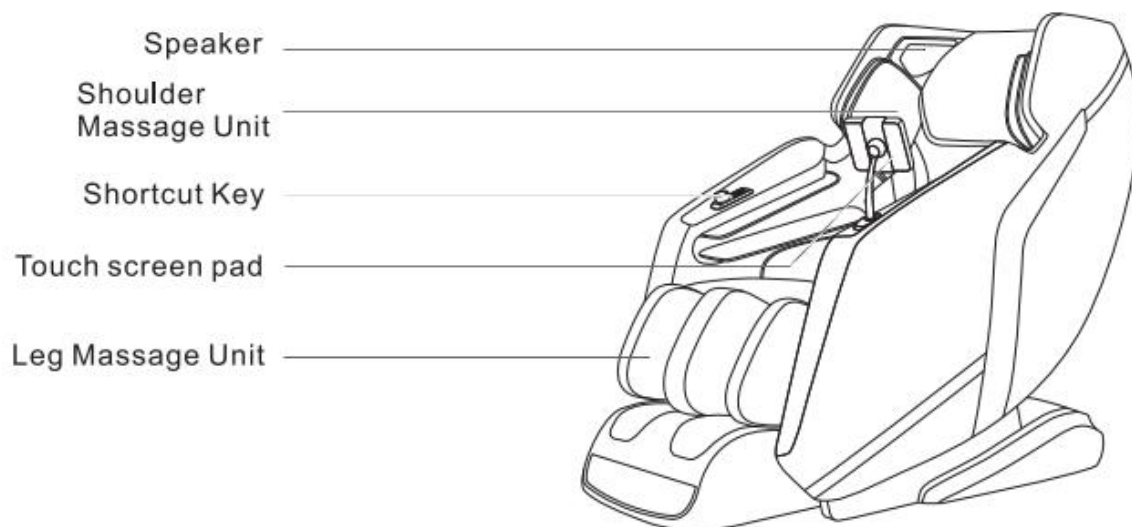






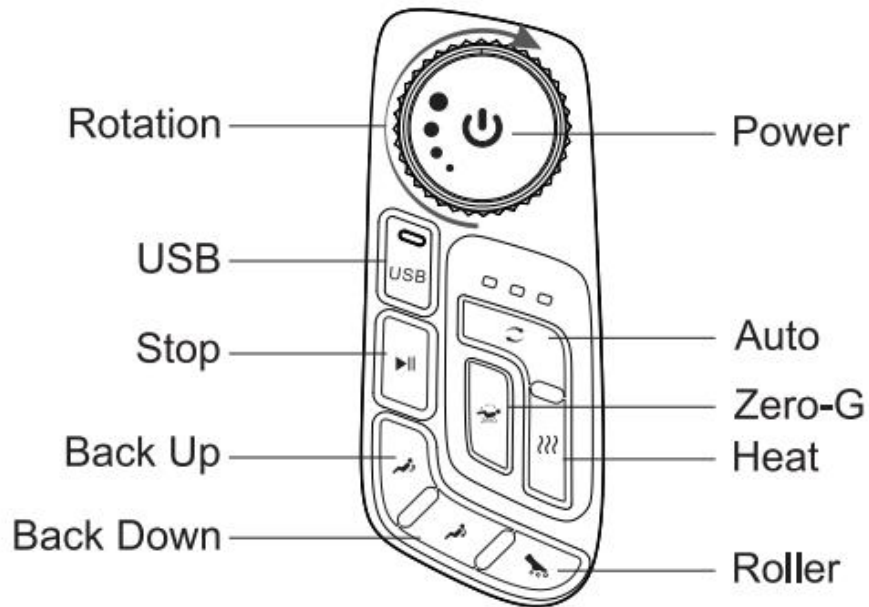


Functions

Functions	Description
3D Mechanism	It can fulfill the forward and backward massage, the width of massage can be adjusted, and massage techniques can be realized by intelligent chip, ultimate massage experience like massage master.
Double SL shape track	Extremely fits the curve of the back of the human body to achieve deep massage of the spine, achieving a long covering from the head and neck massage to the thigh.
7-inch touch screen pad	7-inch large LED touch screen pad for easy operation, one-click collection for customized program.
Full body massage system	Full body flexible airbag, covering from the shoulder to the foot, full body massage.
Automatically adjustable legrest	Automatically adjustable legrest, meet the different heights of whole family, and enjoy the masasge in the most comfortable state.
Foot Reflexology	Three rows of rollers are set on the sole of the foot, and circulatorily Guasha your foot, scatter the congested blood, make your foot healthy.
Heating SPA massage, make you feel refreshing.	Simulate hot stone SPA energy therapy, heat treatment on the back, and ventilate blood to activate cells.
Scorpio surrounded 3D sound	Multiple sets of high-fidelity sound chambers, lossless sound quality, like ear-side private concerts, upgraded massage enjoyment.
Energy recovery capsule	The chair can be assisted by zero gravity angle and various swing angles.

Shortcut Key



Functions	Button	Instruction
Power		ON/OFF
Rotation		Rotate clockwise to increase stage, and counterclockwise to decrease stages. The stage are divided into 1-5 stage.
Stop		Press this button to pause the massage function. Press again to resume the original massage function.
Auto		Press this button to switch between multiple automatic program functions. The specific display is subject to the actual product.
Heat		Press this button to turn ON/OFF the heating function.
Zero-G		Press this button to turn off or switch the zero gravity of stage 1 / 2.
Back Up / Back Down		Press the Back Up/Down button to adjust the backrest angle.
Roller		Press the button to activate Roller, Press again to stop this function.

Model Number	R8858			
Type	Massage Chair	Time	10 min/20 min/30 min	
Specification	Power	170W	Volt	100-240V/50-60Hz
Carton size	1350*790*1170MM		N.W/G.W	90KGS/109KGS
Materials	Metal, Plastic,ABS,Synthetic Leather			

MARKING PLATE

